TABLE OF CONTENTS

DESCRIPTION OF THE APPLIANCE	PAGE 81
THE PANEL	PAGE 82
BEFORE USING YOUR APPLIANCE	PAGE 83
PRECAUTIONS AND GENERAL SUGGESTIONS	PAGE 83
HOW TO OPERATE THE FREEZER COMPARTMENT	PAGE 84
HOW TO OPERATE THE REFRIGERATOR COMPARTMENT	PAGE 86
HOW TO DEFROST THE FREEZER COMPARTMENT	PAGE 87
HOW TO CLEAN THE APPLIANCE	PAGE 88
TROUBLE SHOOTING GUIDE	PAGE 89
AFTER-SALES SERVICE	PAGE 89
INSTALLATION	PAGE 90

DESCRIPTION OF THE APPLIANCE

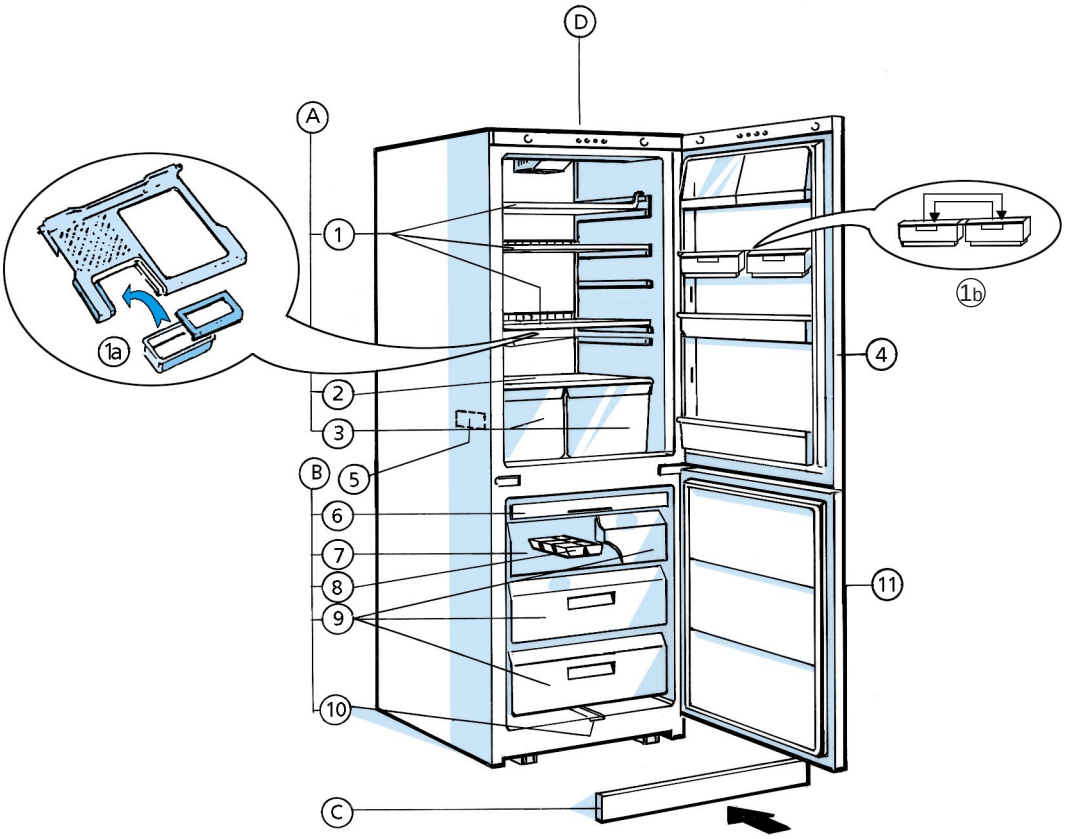

A) Refrigerator compartment (for storing fresh food)

1. Glass grid/shelf adjustable in height depending on the model

1a. A glass shelf made up of different elements makes storing food easier, if available

1b. If available

2. Glass separator

3. Crispers sliding on rails (depending on the model)

4. Refrigerator inner door liner with racks

5. Rating plate (by the side of the crispers)

B) Freezer compartment (marked ******** for freezing fresh foods and for storing commercially frozen foods and producing ice cubes)

6. Tray (if provided) for ice cubes and/or eutectics (cold packs) (depending on the model)

7. Freezing section

8. Ice cube trays

9. Baskets with sliders to identify food stored

10. Defrost water drain

11. Freezer inner door

C) Removable plinth

D) Control panel (depending on the model)

THE PANEL

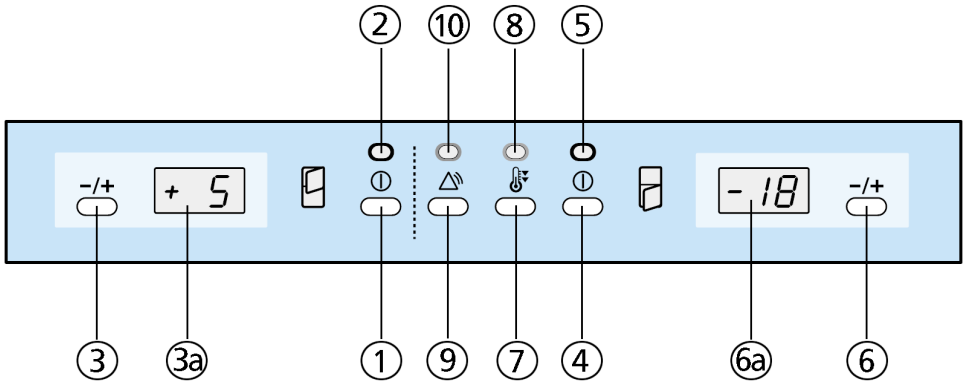

1. On button for refrigerator compartment
2. Green pilot lamp (operation of the refrigerator compartment)
3. Refrigerator compartment temperature selection button
3a. Refrigerator temperature selected indicator display
4. Main and freezer compartment on button
5. Green pilot lamp (operation of the freezer compartment)
6. Freezer compartment temperature selection button
6a. Freezer temperature selected indicator display
7. Fast freeze button
8. Fast freeze yellow pilot lamp
9. Freezer temperature acoustic alarm exclusion button
10. Red alarm pilot lamp for critical temperatures inside the freezer.
It switches on when:
- The appliance is first connected to the mains supply.
- The freezer door has been left open for a long time.
- A larger amount of fresh food than indicated on the rating plate has been loaded for freezing.
- The freezer temperature is not adequate.

BEFORE USING YOUR APPLIANCE

- After unpacking, please ensure that the appliance is undamaged and that the doors close tightly. Any damage must be reported to your dealer within 24 hours of receipt of the appliance.
- **Leave the appliance for 1 hour before connecting it to the electricity supply.**
- The package is recycable and is marked with the recycling symbol ♺.
- The appliance is built with re-usable material. When scrapping, follow the local environmental protection regulations.
- Please ensure that the installation and the electrical connection has been carried out following the manufacturer's instructions and in compliance with local safety regulations.

PRECAUTIONS AND GENERAL SUGGESTIONS

- Only use the refrigerator compartment for the storage of fresh food, and the freezer compartment for the storage of frozen food, the freezing of fresh food and the production of ice cubes.
- After installation, please make sure that the appliance does not stand on the supply cord.
- Do not store glass containers with carbonated drinks in the freezer as they may explode.
- Do not eat ice cubes or ice lollies immediately after their removal from the freezer, as they may cause "cold" burns.
- Before any cleaning or maintenance operation, disconnect the appliance by switching off the electricity at the mains or by pulling the plug.
- Never allow children to operate, play with, or crawl inside the refrigerator.
  Render the appliance inoperative by cutting the power-cable off and take it to the local disposal centres so that refrigeration compounds can be properly treated to avoid air pollution.

Conformity declaration

- This appliance incorporates parts intended to come into contact with foodstuffs and is in compliance with EEC directive 89/109.

Information

This appliance is free of CFC's (refrigerant circuit contains R134a) or free of HFC's (refrigerant circuit contains R600a-Isobutane). For more details, please refer to the rating plate on the appliance.

For appliances with Isobutane (R600a)

The refrigerant Isobutane is a natural gas of high environmental compatibility but which is inflammable. Therefore, it is essential to ensure that the ducts of the refrigerant circuit do not get damaged.

HOW TO OPERATE THE FREEZER COMPARTMENT

① Press the main and freezer compartment on button **(4)**.
- *The green pilot lamp* **(5)** *lights up* (indicating that the freezer compartment is working) flashing until the temperature set is reached, when it remains on steadily.
- The acoustic signal switches on (switch off with button **(9)**).
- *The red pilot lamp* **(10)** *lights up*, flashing. It will remain on (about 1 hour) until the critical alarm temperature is reached.
- The indication -18 (temperature preset in the factory) appears on the display **(6a)** for about 2". After this 2 horizontal lines can be seen, until the selected temperature has been reached.

①

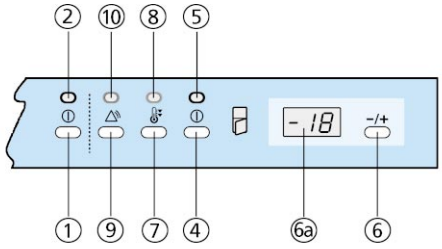

Attention:
- There is no need to set the freezer compartment temperature with the thermostat knob **(6)** as it is preset in the factory (-18 display **6a**) to provide the correct storage temperature of frozen food in the freezer compartment.
- After being switched on, the freezer compartment needs approx. 3 hours prior to loading frozen foods for storage.

Should you need to adjust the internal temperature

1. The button **(6)** must be pressed once or more until the desired value is reached. It will be shown on the display **(6a)**.
- The temperature limit can be set from -18 hottest temperature to -24 coldest temperature.

How to freeze fresh food

The appliance, marked by the ✳✳✳ symbol, allows freezing of fresh food.
The quantity of fresh food which can be frozen at an ambient temperature of +25°C in 24 hours is stated on the rating plate.

①

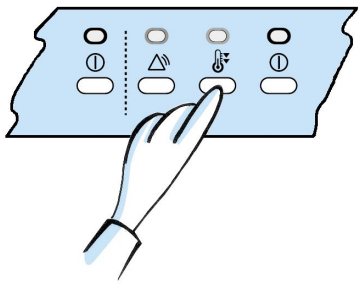

How to operate

① 24 hours before freezing fresh food, press the fast freeze button **(7)** for about 2".
The yellow pilot lamp **(8)** *comes on* and remains on for the whole period, after which it switches off automatically.

2. Wrap and seal food in:
- Aluminium foil, clear film; non permeable plastic wraps, polyethylene containers with tight fitting lids, freezer jars.

③ Place food in the top compartment, leaving enough space for air to circulate around packages. To speed up the freezing process and increase the compartment capacity, remove the top basket and the ice pack storage drawer (if provided). Put the already frozen food into the other drawers and the food still to be frozen directly onto the refrigerator grid.
For more efficient freezing use the fast freeze function for the next 24 hours by pressing the button **(7)** again when the yellow pilot lamp **(8)** goes out.

4. 24 hours later the freezing is completed.
The fast freeze function switches off automatically after the 24 hours (yellow pilot lamp **(8)** off).
N.B.: The function can be interrupted by pressing button **(7)** with *the yellow pilot lamp* **(8)** *on*.

③

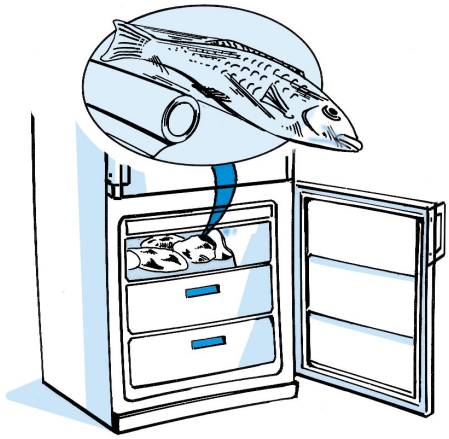

Important:
To increase the capacity of the freezer compartment:

1. Remove the two top baskets.
2. Place the food directly on the grids. In this case food must be stored in line with the basket below.

Note:

- If there is a power failure, the freezer compartment maintains the correct storage temperature for 16 hours approx.
- In models provided with one or two eutectics (cold packs) this time can reach about 25/30 hours.
- Do not open the freezer compartment door during a power failure.

Information on frozen food

When buying frozen food, make sure that:

1. The wrapper or package is intact as the food may deteriorate. If it bulges, sags or has spots of moisture on it, it may not have been kept cold enough and the contents may have lost their original quality.
2. Use thermal bags or cold boxes for transport.
3. Frozen food should always be purchased last.
4. When at home, store it in the freezer immediately.

Important

- Any food, even if partially thawed, cannot be re-frozen but must be eaten within 24 hours.
- Any appreciable rise in temperature of frozen foods may shorten the storage life indicated on the package.
- Always follow instructions on the package to store frozen food.

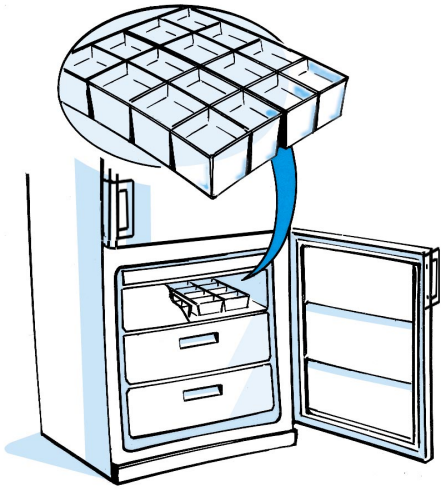

Production of ice cubes

Fill the ice cube trays 3/4 full with water and place them in the freezing compartment or on the tray (if provided).
Use the handle of a spoon to detach the trays if they are stuck to the compartment.
Do not use sharp or cutting instruments.

HOW TO OPERATE THE REFRIGERATOR COMPARTMENT

① Press the refrigerator compartment button **(1)**
- *The inside light switches on* when the door is opened.
- An acoustic alarm sounds when the door has been left open for more than 1 minute. It will switch off when the door is closed.
- *The green pilot lamp* **(2)** *switches on* indicating the operation of the refrigerator compartment flashing until the temperature set is reached, when it remains on steadily.

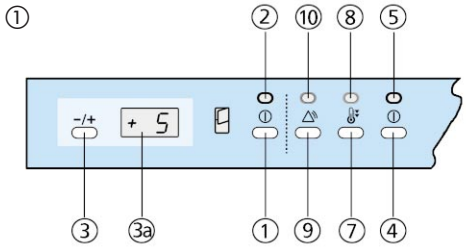

Attention:
- There is no need to set the refrigerator compartment temperature with the thermostat knob **(3)** as it is preset in the factory (+5 display **3a**) to provide the correct storage temperature for the right amount of fresh food.
- After being switched on the refrigerator compartment needs approx. 30 minutes to reach the correct storage temperature with a normal load.

Should you need to adjust the internal temperature:

1. The button **(3)** must be pressed once or more until the desired value is reached. It will be shown on the display **(3a)**.

. The temperature limit can be set from +2 coldest temperature to +8 warmest temperature.

To interrupt the operation of the refrigerator compartment:

1. Press the refrigerator compartment button again **(1)**.

How to store food in the refrigerator compartment

1. Load the refrigerator compartment as shown in the figure opposite:
- **A.** Meat, sausages, fish
- **B.** Cooked food
- **C.** Butter, dairy products
- **D.** Cheese
- **E.** Fruit and vegetables
- **F.** Bottles
- **G.** Ice trays
- **H.** Cold packs (depending on the model)

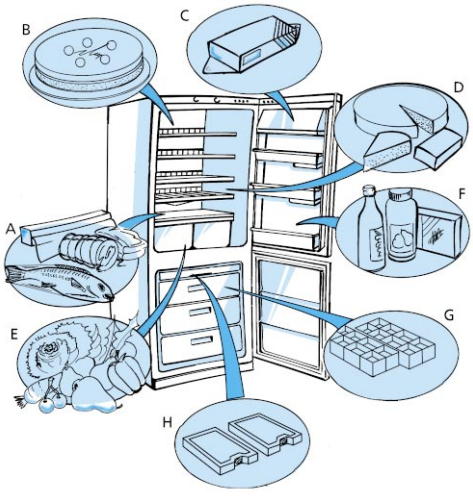

Notes:
- Do not place food in direct contact with the rear compartment wall.
- Ensure free air circulation between the stored food.
- Allow cooked food to cool down before putting it in the refrigerator compartment.

Important:
Defrosting of the refrigerator compartment is completely automatic.

HOW TO DEFROST THE FREEZER COMPARTMENT

We suggest you defrost your freezer once ice build up on the grids reaches about 3 mm in thickness.

1. 24 h before defrosting, press the fast freeze button **(7)** for about 2".
The yellow pilot lamp **(8)** *switches on.*
The food will reach the coldest temperature.

2. Remove food from the freezer, wrap them into several layers of newspaper and put them into a cold place.

3. Disconnect the appliance from the mains supply.

4. Remove the ice trays.

5. Remove the baskets.

6. Pull out the defrost water drain from the bottom part of the freezer compartment.

⑦ Place the lower basket, which has a hole in the rear part, under the drain to collect the defrost water.

8. **Note: Do not use sharp or cutting instruments to scrape the ice off the grids.** Any damage caused to the appliance is not covered by the guarantee.

9. Clean the freezer compartment with a sponge dampened in a solution of luke warm water and neutral detergent.
Do not use abrasives.

10. Rinse and dry carefully.

11. Reposition the drain inside the bottom part of the freezer compartment.

12. Reposition the baskets.

13. Reconnect the appliance to the mains.

14. Press the fast freeze button **(7)** again for about 2".
The yellow pilot lamp **(8)** *comes on* before the food is replaced in the freezer compartment.

Note: The temperature rise of frozen food during defrosting may shorten its storage life.

⑦

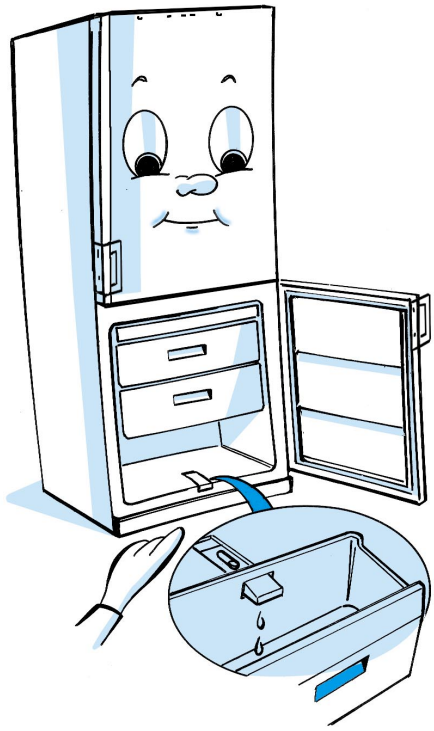

HOW TO CLEAN THE APPLIANCE

Before any cleaning, disconnect the appliance from the mains.

- Clean the inside of the freezer when defrosting.
- Periodically clean the inside of the refrigerator compartment with a sponge dampened in a solution of luke warm water and neutral detergent. Rinse and dry with a soft cloth. **Do not use abrasives.**
- Wipe the outside with a soft cloth dampened in water.
- The defrosting of the refrigerator compartment is completely automatic. Some models are provided with a drain hole. Periodically clean the inside of the pipe with the tool supplied to allow constant and correct water flow.
- Periodically clean the condenser (radiator) situated at the rear of the appliance and the plinth with a vacuum cleaner or a brush.

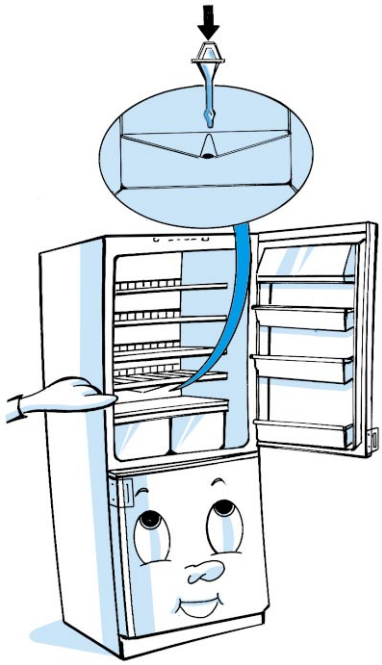

For long absences

1. Empty all items from the appliance compartments.
2. Disconnect it from the mains.
3. Defrost and clean the inside.
4. Leave the doors open to prevent any bad odour.

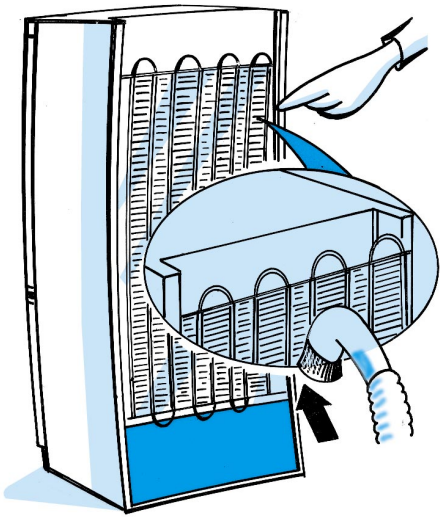

TROUBLE SHOOTING GUIDE

1. **The temperatures in the compartments are not cold enough**
   - Is the food preventing proper closing of the doors?
   - Is the appliance too close to a heat source?
   - Are the temperatures set correct?
   - Is the condenser clean?
   - Is the air flow restricted?

2. **The temperature inside the refrigerator compartment is too cold**
   - Is the temperature set correct?

3. **The appliance is excessively noisy**
   - Is the appliance in contact with other furniture or objects?
   - Are the pipes in the back touching or vibrating?
   - Has the compressor fixing block been removed?

4. **The appliance does not operate**
   - Is there a power failure?
   - Is the appliance plugged in correctly?
   - Has the fuse blown?
   - Is the supply cord broken?
   - Are buttons **1** and **4** pressed?

5. **Water on the floor of the refrigerator compartment**
   - Is the temperature set correct?
   - Is the defrost drain obstructed?

6. **The inside light does not work (see point 4).**
   First check point 4 then:
   - Disconnect the appliance from the mains supply.
   - Remove the bulb cover.
     Check the bulb and replace it if necessary.
     Replace the bulb by a new one. Do not exceed 15 W.
     N.B.: This product uses a special bulb.
     To replace it do not unscrew but pull it towards the inside of the appliance.

For Great Britain only
Check that the plug fuse is well fitted. A 13 A fuse must be used.
Check removable plugs for loose connections and tighten them if necessary.
Loose connections can overheat the plug.

AFTER SALES SERVICE

Before contacting Customer Service

1. Try to remedy the problem (see "Trouble-shooting guide").
2. Restart the programme toosee if the falut is repeated.
3. If the malfunction presists, call Customer Service and specify:

- The nature model of the appliance
- The exact model of the appliance
- The service code
  (number after the word SERVICE, on the rating plate at the side of the crispers).
- Your full address
- Your telephone number and area code.

SERVICE 0000 000 00000

Note: Door swing change, if carried out by the After-Sale Service, is not covered by the warranty.

INSTALLATION

- Before switching the appliance on, remove the compressor fixing block
- Do not install the refrigerator close to any heat source.
- Place it in a dry and well ventilated space.
- Make sure that the appliance is well levelled. Adjust the front feet if required.
- Leave at least a 50 mm gap above the appliance.
- Some models have lateral protruding sides which allow the direct positioning of the appliance against the rear wall. Otherwhise fit the spacers (if provided) at the rear of the appliance, on top of the condenser.
- Clean the inside (see chapter "How to clean your appliance")
- Mount the accessories.

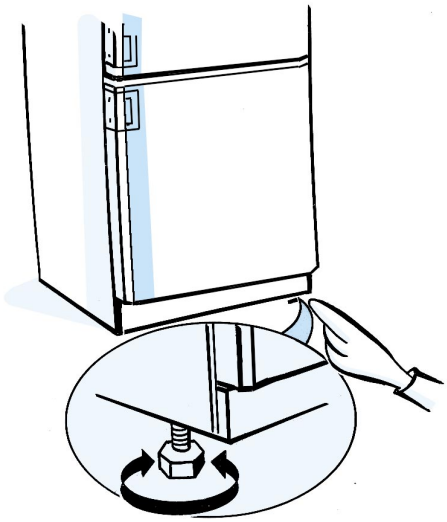

Electrical connection

- **Electrical connection must be made in accordance with local regulations.**
- Voltage, power consuption and earthing information is show on the rating plate (at the side of the crispers).
- **The electrical system must be equipped with an earth wire, as prescribed by law.**
  The Manufacturer declines all liability for injery to persons or damage to property resulting from the failure to observe these instructions.
- Do not make the electrical connection using estension leads, adapters, etc.

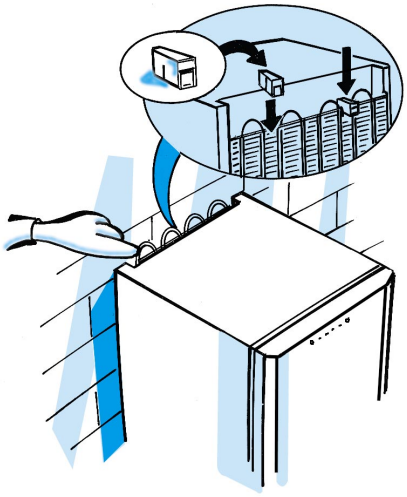

For Great Britain only:

ELECTRICAL INFORMATION

WARNING - THIS APPLIANCE MUST BE EARTHED
Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13 amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

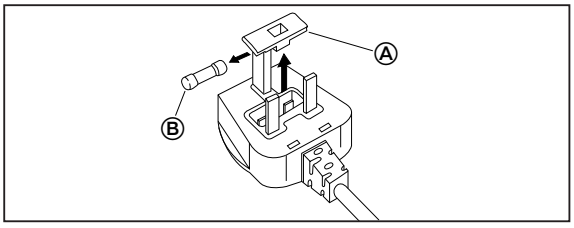

1. Remove the fuse cover (A) and fuse (B)
2. Fit replacement 13A fuse into fuse cover
3. Refit both into plug.

IMPORTANT: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacements are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store.

CONNECTION TO A REWIREABLE PLUG

If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere. A suitable alternative plug should then be fitted to the cable.

The wires in this mains lead are coloured in accordance with the following code:

BLUE "NEUTRAL" ("N")

BROWN "LIVE" ("L")

GREEN AND YELLOW "EARTH" ("E")

1. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol ⏚ or coloured green or green and yellow.
2. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured black.
3. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured red.

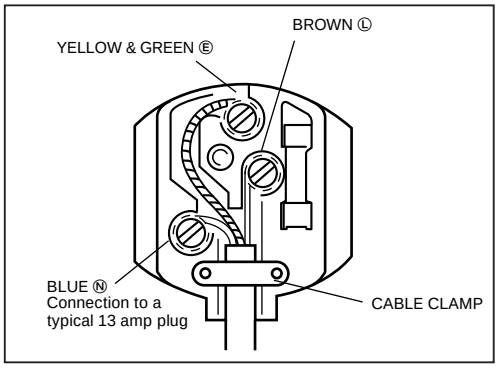

For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. In this case, the wire which is coloured GREEN AND YELLOW must be connected to the EARTH contact, and the other two wires to the pins, irrespective of colour. The supply to the socket must be fitted with a 16 amp fuse.